


CLUTCH CABLE RELEASE MECHINISIM

1. Drain transmission oil.
2. Remove 6 socket head cap screws on cover.



3. Remove snap ring.

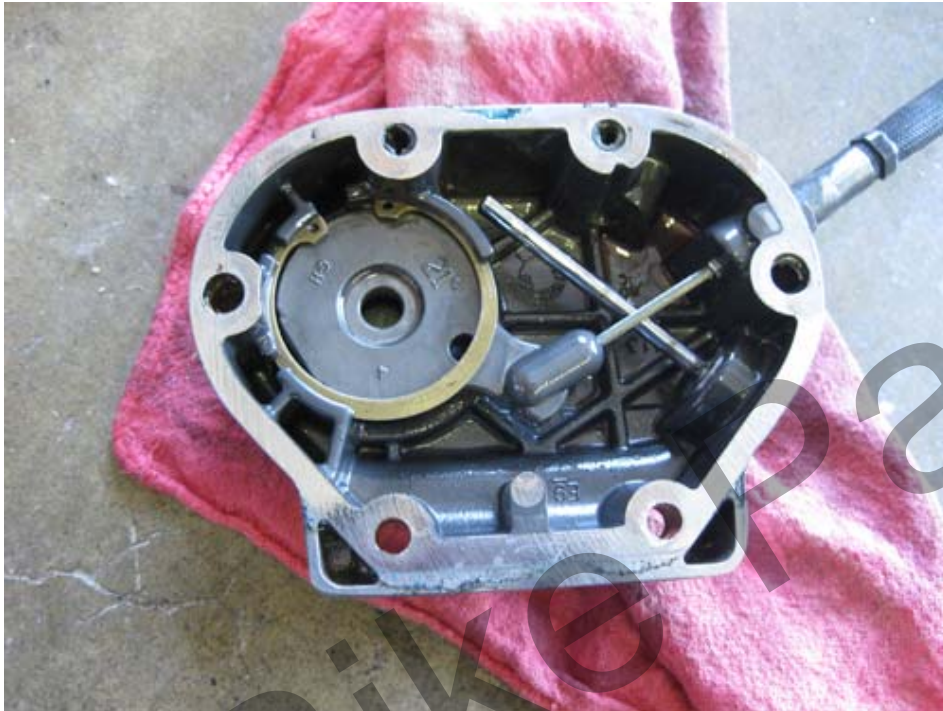

CLUTCH CABLE RELEASE MECHINISIM



4. Remove ball and ramp mechanism from cable.




5. Install new clutch cable.

CLUTCH CABLE RELEASE MECHINISIM




6. Note the angle. A lot of people think they received the wrong cable because it does not thread in straight. Do not over tighten, o-ring will crush.

CLUTCH CABLE RELEASE MECHINISIM

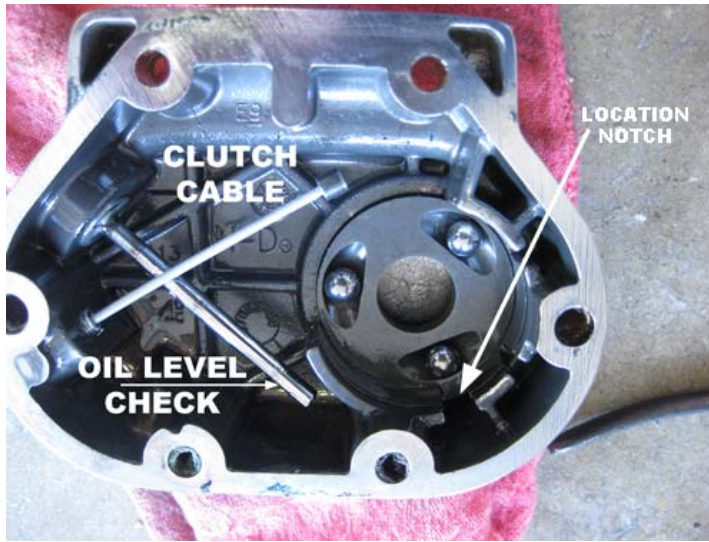

The snap ring must be in the groove provided for it or it will not work.

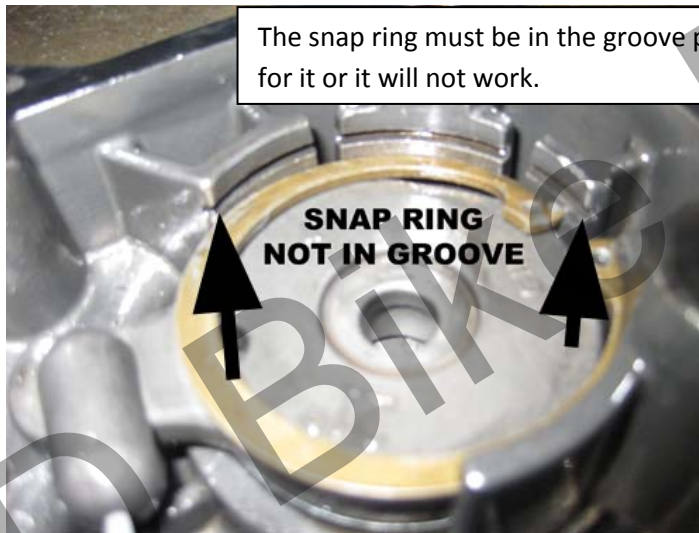

CLUTCH CABLE RELEASE MECHINISIM

7. Make sure ball & ramp system is working by rotating back and forth, should move up and down.
8. Always replace gaskets with new ones.

www.hdbikeparts.com

HD Bike Parts